

Pressure Measurement Film

PRESCALE

Application Examples

[No.12]

Measured Object

Suction jig for die bonding

Uses

To reduce mistakes when removing and transporting chips in die bonding

Benefits

Higher quality Higher yield

Industry **Semiconductor manufacturing (die bonding)**

Applications **Adjustment of chip suction jig (die collet) for use in die bonding**

Challenges

When semiconductor chips are bonded to a lead frame (LF) or substrate, the chips are removed from a wafer after dicing by use of a suction jig, known as a “die collet” and then transported. If the suction nozzle is not applied evenly to the semiconductor chips, problems may occur when the chips are removed, or the chips may become flawed. As wafers become thinner and more easily breakable, greater care is required.

Measurement

Product used: Prescale (Ultra Super Low Pressure LLLW, Super Low Pressure LLW)

- Create a plate-shaped dummy wafer that will have a height (thickness) equal to the production wafer after adding 200-μm-thick layer of Prescale film.
- When a suction nozzle needs to be changed, place the dummy wafer on the bonding device, insert Prescale (LLW, LLLW), and then perform the suction operation.
- Check the evenness of the film coloring after suction application and confirm whether the suction nozzle was applied evenly to the wafer.

Results (images)

It is possible to determine whether the suction nozzle will be applied evenly to the wafer (semiconductor chip) before starting production. This means that transport problems and chip damage can be actively prevented.


[Not Good]

Suction nozzle is applied unevenly



[Good]

Suction nozzle is applied evenly

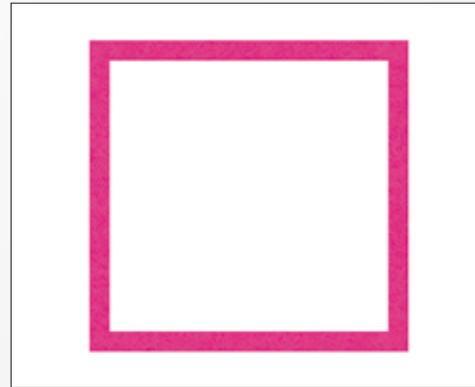

Benefits of Prescale

When the suction nozzle is changed, transport or quality problems may occur due to the uneven application of the suction nozzle to semiconductor chips. This leads to the following:

● Loss of quality

If defects are missed at inspections, defective products may be shipped.

● Loss of materials

If defects are found at inspections, materials used in defective production and line changing will be lost

● Loss of time

Taking corrective action by trial and error can take up to a day

Without using Prescale

Die bonding is started immediately after the suction nozzle is changed. Since the evenness of nozzle application cannot be checked, problems may not be discovered until a process stoppage occurs (due to a transport issue), or until defects are found in the final inspection. **In addition to the occurrence of defects, time is lost when adjusting equipment.**

With Prescale

When a suction nozzle is changed, Prescale is used to verify nozzle fitment. Die bonding is only started after making adjustments. Thus, **process/quality abnormalities** due to suction-related transport **can be prevented.**

*Note that the specifications and performance data described in this catalog are subject to change without notice for the purpose of improvement. Since the images provided are used for illustration purposes, they may differ slightly from actual products.

FUJIFILM

FUJIFILM Corporation

<http://www.fujifilm.com/products/prescale/>

Kizárólagos hazai forgalmazó:

A.A. Stádium Kft.

www.aastadium.hu/termekek/prescale

prescale@aastadium.hu 62/431-927 20/980-4664



Ref. No. IB-0912E (SK-09-03-F1099) Printed in Japan ©2009 FUJIFILM Corporation